

FIXING INSTRUCTIONS

Cross Rafter Ventilator



- 1.** Fit the Cross Rafter Ventilator at the top of jack rafters when used at hips. Fit at the top of rafters when used at high level or ridge applications.
- 2.** Nail the top and bottom of each Cross Rafter Ventilator to hold it in position until the underlay can be laid.
- 3.** Lay underlay and battens in the normal manner. The batten will compress the Cross Rafter Ventilator locally so as not to disturb the roof tiles.

NB: 3 x 600mm long Cross Rafter Ventilators are required per rafter with batten gauges less than 250mm.

